Clever Trims Installation Instruction

C Channel

1. Wipe and clean the surface before setting the trims in place
2. Fix the base plate into position using liquid nail and / or screws directly to the subfloor
3. Lay the underlay and then Install Flooring, leaving a 9-10mm space between the boards and the centre piece of the trim.
4. Fix the Top Plate of the C Channel Trim, to the base with rubber hammer (apply liquid nails into the channel for extra strength and stability) – Ensure the Top Plate is not to tight restricting natural movement

Universe Cover & Reducer Trim

1. Wipe and clean the surface before setting the trims in place
2. Lay the underlay and then Install Flooring, leaving a 9-10mm space between the boards and/or other flooring types.
3. Fix the base plate into position using screws directly into the subfloor
4. Fix the Top Plate of the Universal Cover & Reducer Trim, to the base with rubber hammer (apply liquid nails into the channel for extra strength and stability) – Ensure the Top Plate is not to tight restricting natural movement

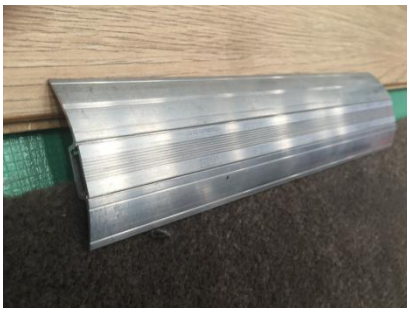

H Expansion / Contraction Trim

1. Wipe and clean the surface before setting the trims in place
2. Fix the base plate into position using liquid nail and / or screws directly to the subfloor
3. Lay the underlay and then Install Flooring, leaving a 9-10mm space between the boards and the centre piece of the trim.
4. Fix the Top Plate of the H Expansion / Contraction Trim, to the base with rubber hammer (apply liquid nails into the channel for extra strength and stability) – Ensure the Top Plate is not to tight restricting natural movement

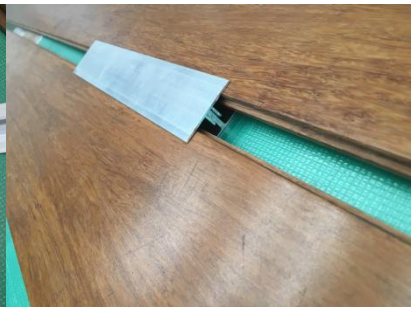

Bullnose Stair Trim

1. Wipe and clean the surface before setting the trims in place
2. Lay the underlay and then Install Flooring, on the stairs, boards will need to be directly stuck
3. Fix the base plate into position using liquid nail and / or screws directly to the board
4. Fix the Top Plate of the Bullnose Stair Trim, to the base with rubber hammer (apply liquid nails into the channel for extra strength and stability)

L Angle Trim
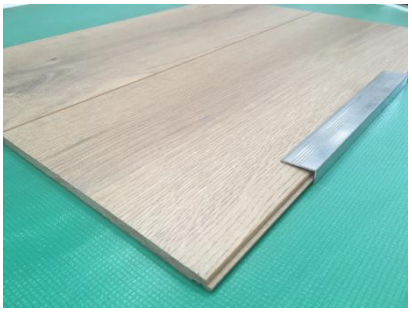
1. Wipe and clean the surface before setting the trims in place
2. Lay the underlay and then Install Flooring, leaving a 9-10mm space between the boards and any solid objects
3. Fix the Top Plate of the L Angle Trim, to the solid object (apply liquid nails to the outside edge to secure it in place) – Ensure the Top Plate is not to tight restricting natural movement